

Item No.: 32029 Input: DC 5V/1500mA Maximum input: DC 5.3V/1500mA Output: DC 5V/1000mA . 2100mA Capacity: 8000mAh. 29.6Wh Operating temperature: 0~45°C tor Charging 0~50°C for Discharging Product Name: Power Bank

EN

 
CAUTION: Risk of Fire and Burns, don't open, crush. disassemble and dispose of in fire. Accessible surfaces held or touched for short periods only. Don't heat above 50 °C or Incinerate. Follow Manufacturer's Instructions.

FR

DANGER: risque d'incendie et de brûlures, ne pas ouvrir, démonter, écraser ni jeter au feu. Ne pas toucher ou tenir les surfaces accessibles sur une longue durée. Ne pas chauffer au-dessus de 50 ° C. Instructions de fabricant Suivre

MADE IN CHINA

PRODUCT OVERVIEW



- 1. 5V Input Port (Micro USB)
- 2. 5V Output Port 1 (USB A-type)
- 3. 5V Output Port 2 (USB A-type)

Button and Indicator

flash

hlink

lit

Press once

4 ON/OFF Button

Status

Charging

Working

Power On

Power Off

Fully charged

- 5. LED indicator (advise of remaining charge number of illuminated lights decreases as power supply dwindles.)
 - Accessory: USB Cable



How to use

Instructions:

1. Charging the portable Power bank

a. Using your mobile phone's USB adapter. Connect a USB cable to your phone's USB adapter. Using the micro USB connector, connect the other end of the USB cable to the IN port on the portable Power bank. Plug the USB adapter into the outlet to begin charging.

b. Using your computer. Connect a USB cable to a USB

outlet on your computer. Using the micro USB connector, connect the other end of the USB cable to an IN port on the portable Power bank. Make sure the computer is on to begin charging the portable Power bank.

- 2. Charging mobile phones and other electronic devices.
- a. The portable power device has a USB output port which has the maximum output current of 2100 mA.

b. Connect to USB cable to your mobile phone/device using the appropriate connector. Connect the other end of the USB cable to the OUT port of the portable Power bank. Your mobile phone/device should display the status of charging.

c. Remove the USB cable from your mobile device when it is fully charged.

Note: In order to charge device use only accessory cable (provided with power bank) or the cable included with your own device by the manufacturer.

IMPORTANT SAFETY PRECAUTION

WARNING - When using this product, basic precautions should always be followed, including the following:

1. Read all the instructions before using the product.

2. Power bank main unit contains an internal lithium ion battery. Upon initial use or after a prolonged storage period, fully charge it once. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.

3. Power banks are not allowed in checked luggage on commercial airline flights. Handle with care and dispose of in accordance to local regulations. Carry-on only.

4.To reduce the risk of injury, close supervision is necessary when the product is used near children.

- 5. Do not put fingers or hands into the product.
- 6. Do not expose power bank to rain or snow.

7. Use of a power supply or charger not recommended or sold by power pack manufacturer may result in a risk of fire or injury to persons.

8. Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or iniury to persons.

9. Do not use the power bank that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

10.Do not disassemble the power bank. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.

11.Do not expose a power pack to fire or excessive temperature. Never store or use this product in temperatures below 32°F (0°C) or above 115°F (45°C).

12. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

13.Do not charge the power bank while using the power bank to charge a device. Do not charge the power bank for more than 4-6 hours and do not leave unattended.

14.Disconet the power bank when not in use.

15.For safe air delivery of your power bank, the battery may need to be charged. Please fully charge your power bank before usage.

16.When not being used for prolonged periods of time please charge every 3 months to avoid damaging the battery.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAVE THESE INSTRUCTIONS

